WIRED TRANSMISSION DIGITAL TORQUE WRENCHES (KEYBOARD SIGNAL)










Torque wrench:

- Unit: N.m, in.lb, ft.lb, kg.cm
- Clockwise and counter-clockwise operation
- Peak and track working mode
- Can set tolerance with judgement in peak working mode
- 9 target torque values can be set, with audible and visible alarm:
 - Green LED light on and buzzer sounds when torque value is 80%~99.5% of target torque
 - Both green and red LED light on and buzzer sounds when torque value is over 99.5% of target torque
- Power off in 2 minutes automatically
- Non-slip grip handle
- With overload record (once the torque reaches 110% of the maximum range)

Data transmission:

- Keyboard signal through a cable, can be transmitted to Excel, Word, Txt, etc
- Press the output button once to output a value

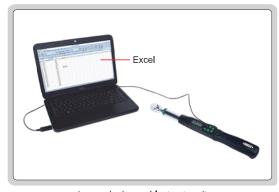

transmission cable (optional) keyboard signal output via transmission cable

SPECIFICATION

| Code | IST-17W06A | IST-17W12A | IST-17W20A | IST-17W30A | IST-17W135A | IST-17W200A | IST-17W340A |
|-------------------------|---------------------------------|------------|------------|----------------------|-------------|-------------|-------------|
| Туре | type A (short handle) | | | type B (long handle) | | | |
| Range | 1.2~6N.m | 2.4~12N.m | 4~20N.m | 6~30N.m | 27~135N.m | 40~200N.m | 68~340N.m |
| Accuracy | clockwise: ±2% | | | | | | |
| | counter-clock wise: ±3% | | | | | | |
| Tolerance setting range | -20%~+20% (target torque value) | | | | | | |
| Resolution | 0.001N.m | 0.01N.m | 0.01N.m | 0.01N.m | 0.1N.m | 0.1N.m | 0.1N.m |
| Square driver (L) | 1/4" | 1/4" | 1/4" | 1/4" | 3/8" | 1/2" | 1/2" |
| Power supply | 2×AAA battery | | | 2×AA batteries | | | |
| Length | 215mm | 215mm | 215mm | 390mm | 415mm | 530mm | 650mm |
| Weight | 750g | 750g | 750g | 760g | 940g | 1340g | 1540g |

OPTIONAL ACCESSORY

| Calibration cable | IST-SD-CABLE | | |
|---|----------------|--|--|
| Transmission cable (keyboard signal) | IST-HID-CABLE* | | |
| Transmission cable (serial port signal) | 7305-IST* | | |

^{*}Torque wrench must be equipped with an optional transmission cable to enable data transmission